



GB Fitting Instructions:	SIDESTEP / SIDE BAR
D Montageanleitung:	TRITTBRETT / SCHWELLERROHR
NL Montagevoorschrift:	SIDE STEP / SIDE BAR
F Instructions de montage:	MARCHE-PIEDS
E Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
I Schema di montaggio:	PEDANE LATERALI
S Manual:	SIDOFOTSTEG
RUS РУКОВОДСТВО ПО МОНТАЖУ:	ПОРОГИ ТРУБООБРАЗНЫЕ

VW Amarok 2010→



Type Nr.: 2H/4 Ausf.: A
Best.-Nr.: VW 1327



Type Nr.: 2H/5 Ausf.: A/Ausf.: B
Best.-Nr.: VW 1329; 1315




45 Min.



All rights reserved to modify the text







Type Nr.: 2H/4 Ausf.: A; 2H/5 Ausf.: A/Ausf.: B






Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktyg somskrävs / Необходимые инструменты

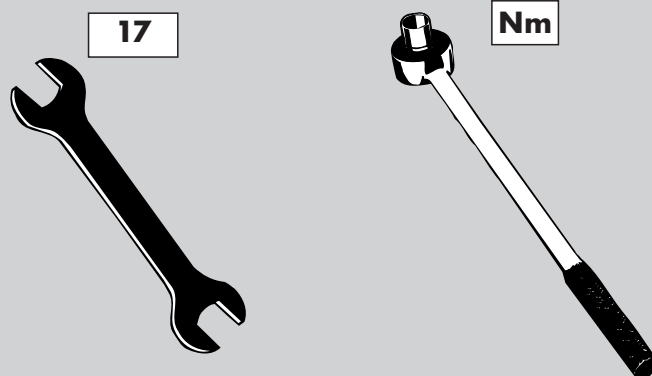

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

1 Schwellerrohr 2 x	Trittbrett 2 x
2 Front 2 x	8 M 10 x 25 2 x
3 Middle 2 x	9 M 10 x 25 6 x
4 Rear 2 x	10 M 10 x 25 6 x
5 M 10 2 x	11 ø 10,2 12 x
6 M 10 2 x	12 M 10 10 x
7 M 10 2 x	13 ø 10,5 6 x

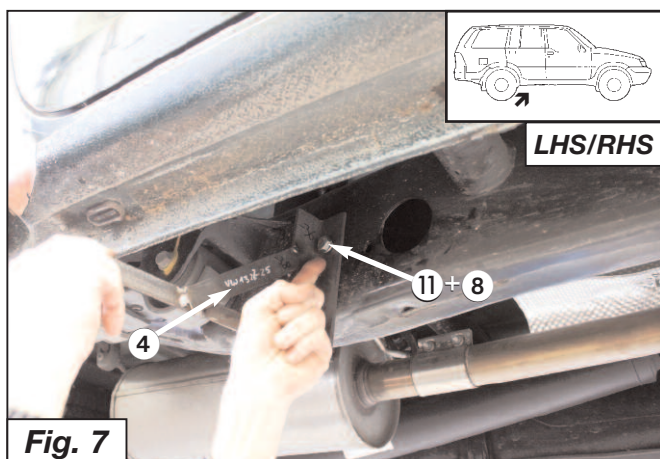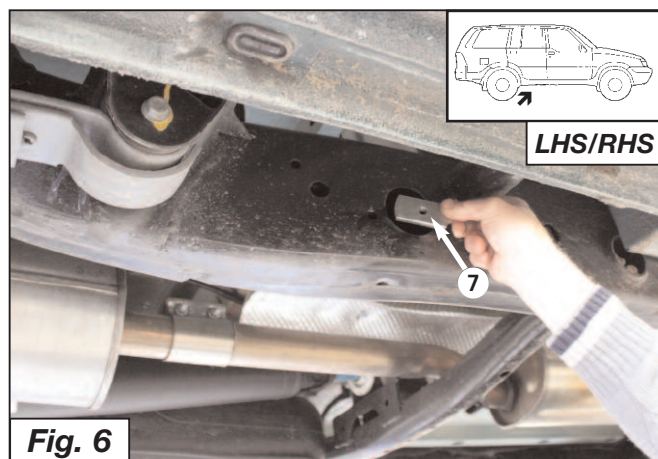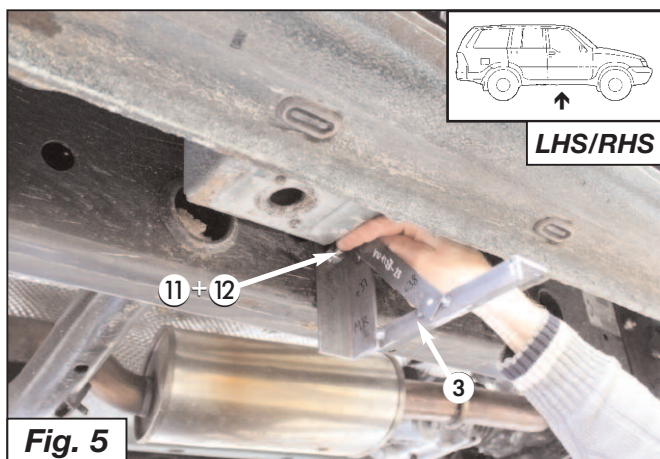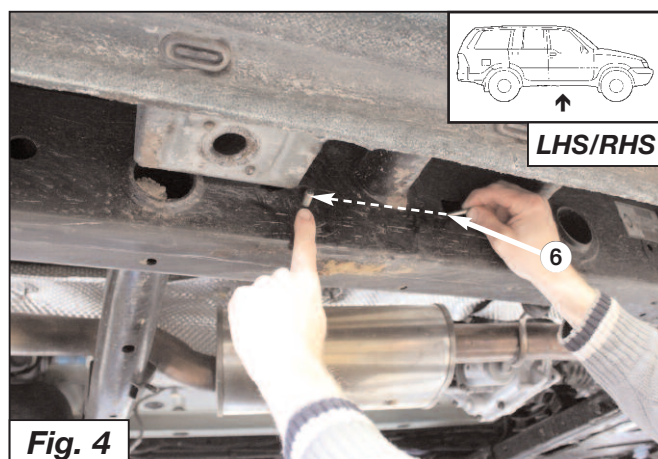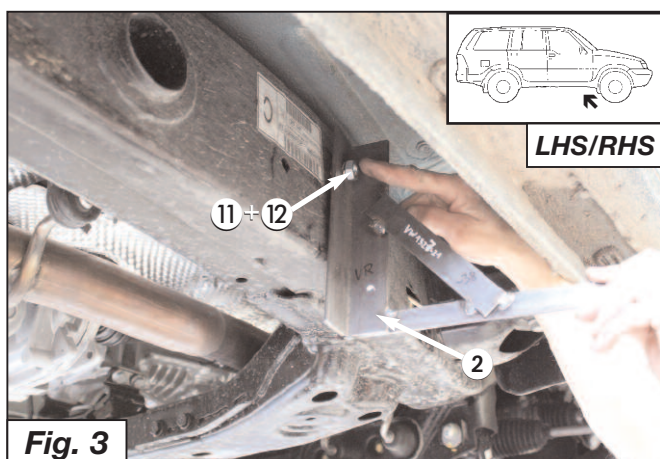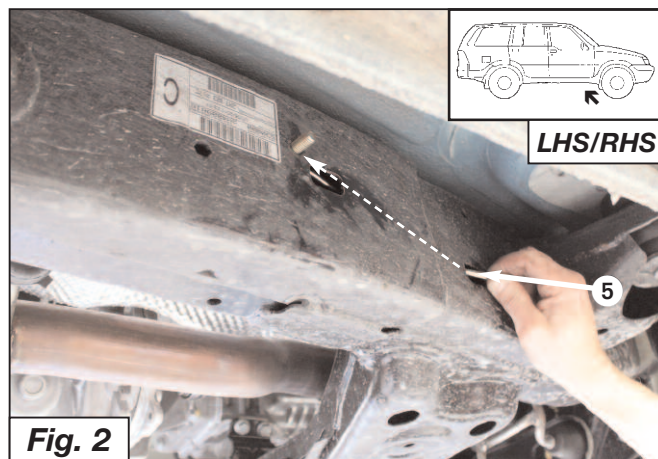

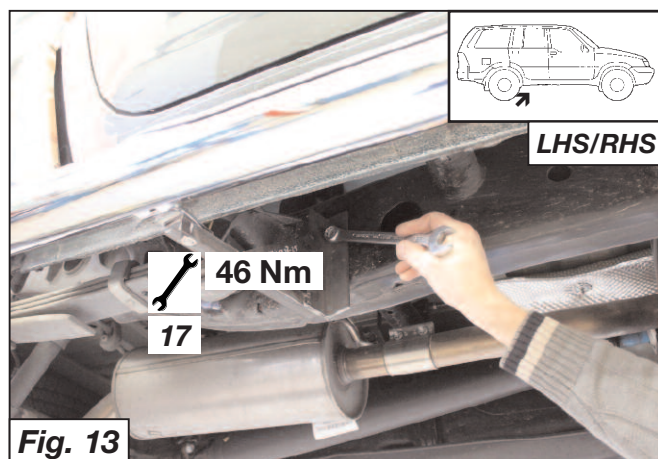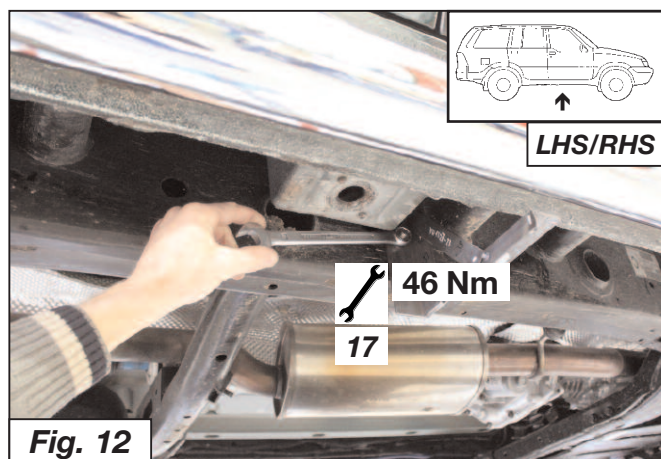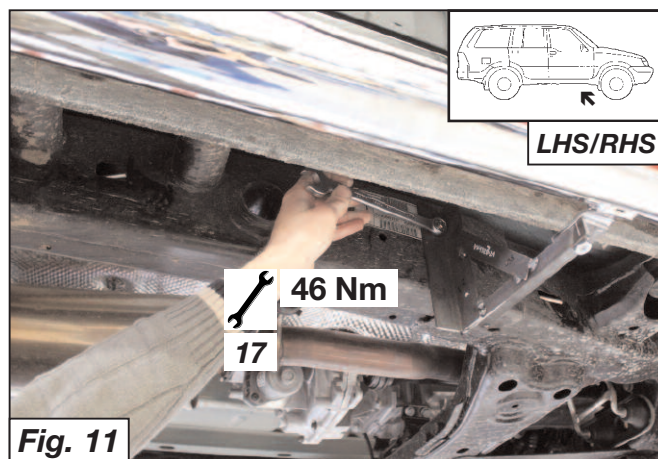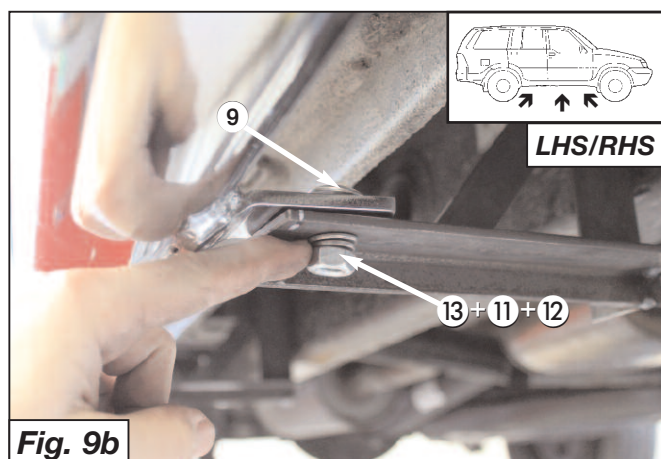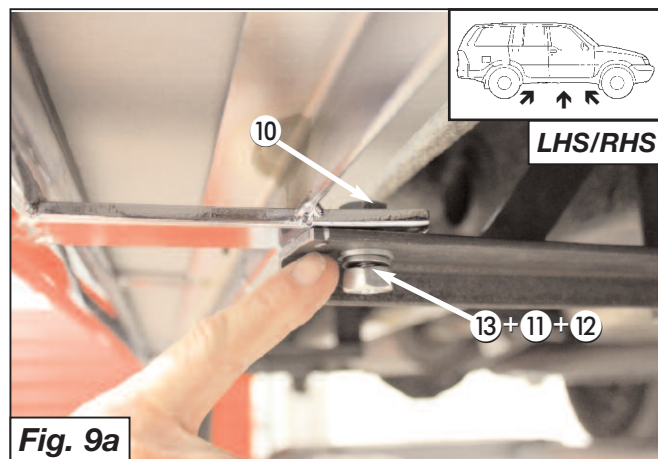

Type Nr.: 2H/4 Ausf.: A; 2H/5 Ausf.: A/Ausf.: B

